


CRYSTAL FIRES
1 VALENTINES BUILDINGS
BECHERS DRIVE
AINTREE RACECOURSE BUSINESS PARK
L9 5AY

MERTIK MAXITROL SWITCH PANEL

ADDITIONAL INSTRUCTIONS

THESE INSTRUCTIONS ARE FOR THE USE ON CRYSTAL FIRES REMOTE
CONTROL RANGE OF GAS FIRES

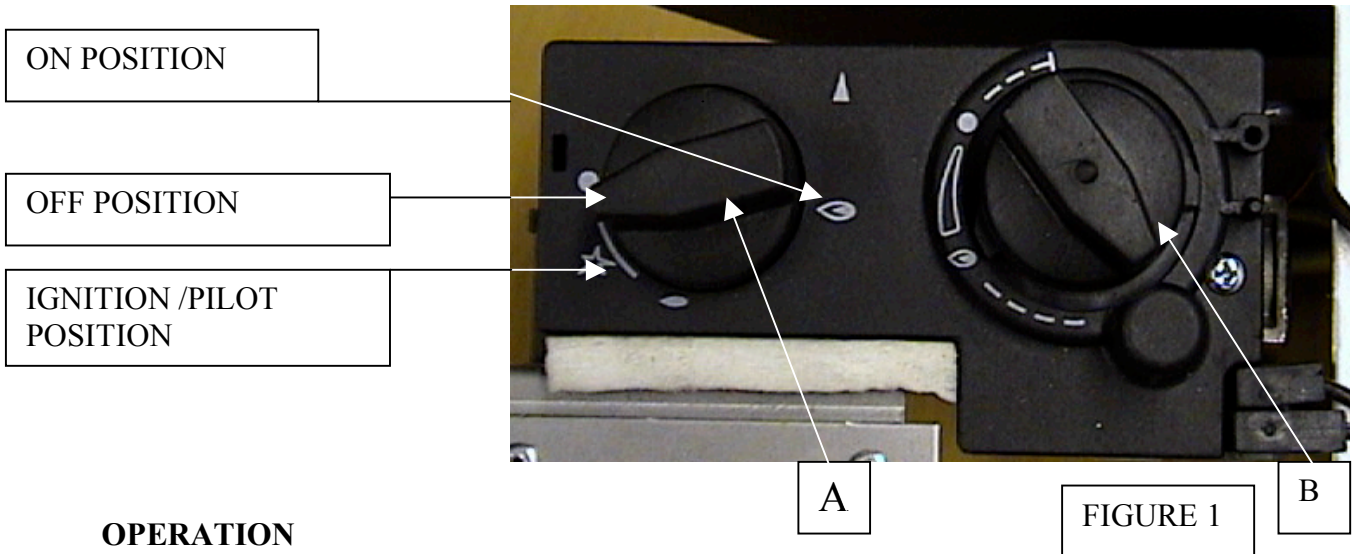

OPERATION

LIGHTING PROCEDURE

1. TURN KNOB **A** (FIGURE 1) SLIGHTLY LEFT TOWARDS THE IGNITION POSITION(SHOWN IN FIG 1 ABOVE) UNTIL REACHING STOP,PRESS DOWN AND HOLD FOR FIVE SECONDS
(ONLY PILOT GAS FLOWS)
2. CONTINUE PRESSING DOWN KNOB **A** WHILE TURNING FURTHER LEFT TO ACTIVATE PIEZO,CONTINUE TO HOLD DOWN FOR 10 SECONDS AFTER PILOT HAS BEEN LIT,IF PILOT DOES NOT LIGHT,STEPS 1 AND 2 CAN BE REPEATED IMMEDIATELY.
3. UPON LIGHTING,RELEASE KNOB **A** AND TURN FURTHER LEFT TO ON POSITION (SHOWN IN FIGURE 1 ABOVE)PILOT GAS FLOWS AND MAIN BURNER FLOWS IN ACCORDANCE TO THE FLAME SETTING(KNOB **B** AS SHOWN IN FIG 1 ABOVE)

ADJUSTING THE FLAME SETTINGS

TO TURN THE FIRE ON AND/OR TO ADJUST THE FLAME SETTING, PRESS THE TOP BUTTON ON THE SPACER AND KEEP PRESSED THE APPLIANCE WILL BE TURNED TO THE HIGH POSITION AND THE CLUTCH WILL KICK IN ONCE THE MAXIMUM SETTING IS REACHED.TO LOWER THE FIRE OR TURN OFF PRESS THE BOTTOM BUTTON ON THE SPACER AND KEEP PRESSED UNTIL THE DESIRED SETTING IS REACHED,OR IF THE APPLIANCE IS TO BE TURNED OFF KEEP PRESSED UNTIL THE FIRE EXTINGUISHES COMPLETELY

SHUT OFF PROCEDURE

- 1.TURN KNOB **A** RIGHT UNTIL REACHING STOP. IN THIS POSITION ONLY PILOT GAS FLOWS
- 2.TO SHUT OFF VALVE COMPLETELY,PRESS DOWN SLIGHTLY AND CONTINUE TURNING RIGHT FROM PILOT POSITION TO THE OFF POSITION.THE SAFETY INTERLOCK PREVENTS RE-IGNITION OF THE PILOT FLAME UNTIL THERMOCOUPLE HAS COOLED DOWN SUFFICIENTLY(ELAPSED TIME WILL VARY BASED ON THERMOCOUPLE TYPE)



THE BATTERY HOLDER IS INSERTED BENEATH THE RIGHT SIDE OF THE FIRE. TO REPLACE BATTERIES ALLOW FIRE TO COOL FOR AT LEAST 30 MINUTES THEN PULL OUT BATTERY HOLDER, THE COVER CAN SLIDE OFF AS ABOVE AND THE BATTERIES CAN BE REPLACED. (USE ONLY LIKE FOR LIKE ALKALINE AA BATTERIES)

REPLACEMENT PARTS
BATTERY HOLDER
GAS VALVE

CRYSMERTIK HOLDERS SWITCH PANEL
CRYSMERTIK VALVE

INSTALLATION INFORMATION

GAS SUPPLY: THE GAS CONNECTION CAN BE FROM EITHER THE LEFT OR RIGHT HAND SIDE OF THE FIRE. ENSURE THAT THE GAS PIPE DOES NOT PREVENT THE REMOVAL OF THE BATTERY HOLDER AND SENSOR OR ACCESS TO OPERATE THE GAS CONTROL KNOBS

MODIFIED TECHNICAL DATA

INJECTOR SIZES	
SUPER HEATRAVE/SLIMLINE/RUBY/	CAT 82/460
SAPPHIRE	CAT 82/420
JEWEL	CAT 82/500